




Product Manual

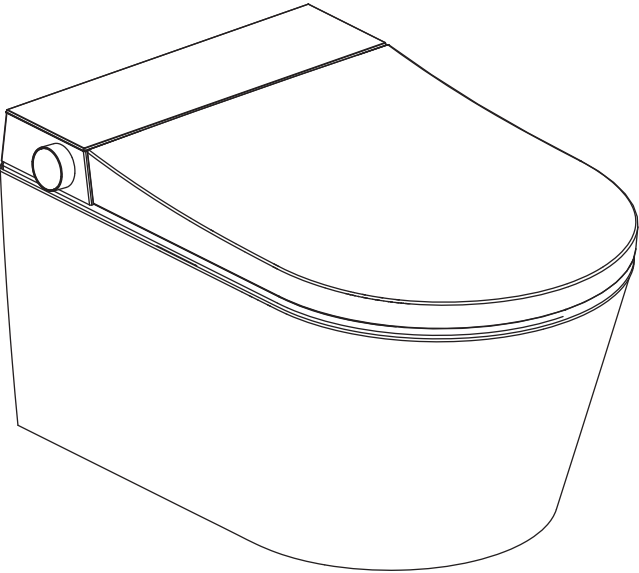

Thank you for purchasing our product. Please read this manual before installation and use to ensure that your product will function at peak performance.
Read this manual thoroughly and store in a safe place for future references.


The functions may vary from different part no.

Category	Model	
	Functions	G06-GE
Cleaning	Unlimited wash	●
	Rear wash	●
	Front wash	●
	Auto wash	●
	Oscillating wash	●
	H/C massage	●
	Adjustable water pressure	●
	Adjustable water temperature	●
	Adjustable nozzle position	●
	Detachable nozzle	●
	Nozzle self-cleaning	●
	Cleaning nozzle	●
Convenience	Heated seat	●
	Warm dryer	●
	Warm dryer plus	-
	Auto deodorization	-
	Soft close	●
	Adjustable seat temperature	●
	Adjustable air temperature	●
	Night light	●
	Instant heating	●
	Add liquid to remove scale	●
	Remote open lid	-
	Remote open seat	-
	Foot feel open lid	-
	Foot feel open seat	-
	Seat sensor	●
	Digital display	-
	Microwave induction	-
Safety	Memory mode	●
	Auto-start	●
	SUS filter	●
	Air isolation	●
	UV sterilization	-
	Backflow prevention	●
	Easy clean glaze	●
	Multi-Protections	●
	Anti-bacterial seat	●
	Fire and heat resistant	●
	Factory reset	●

Notice: ● represents that the product have this function.

User Friendly Design

New features to offer you an enjoyable experience

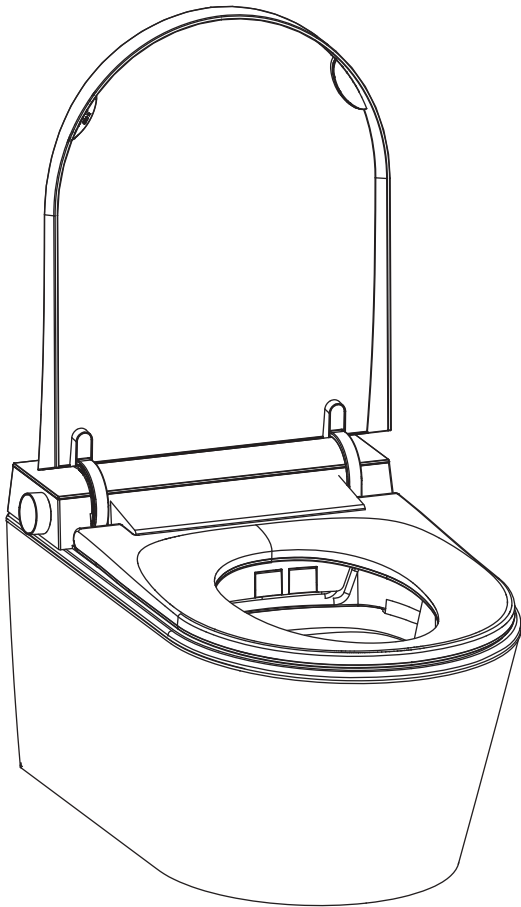

Contents

Parts Information	1
Overview	1
Remote Controller	2
Warnings and safety	3
Warning	4
Attentions	6



Installation	7
Before you Install	8
Function Explanations	25
Maintenance	27

Troubleshooting	29
Power button	29
Wash functions	29
Dryer	29
Heated Seat	29
Remote Control	30
Others	30
Specifications	31


Parts Information

Overview, Remote controller

Overall Picture

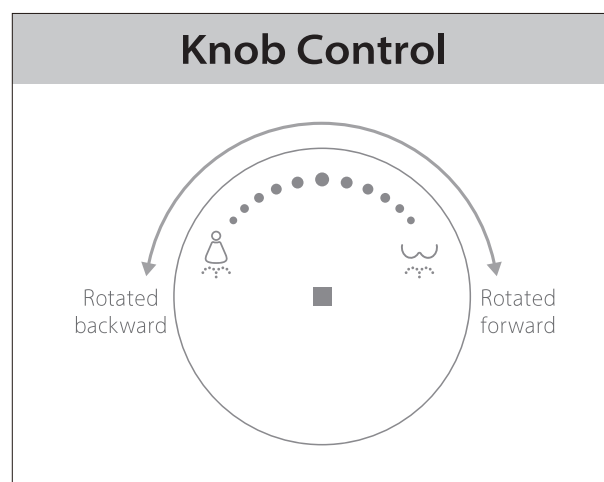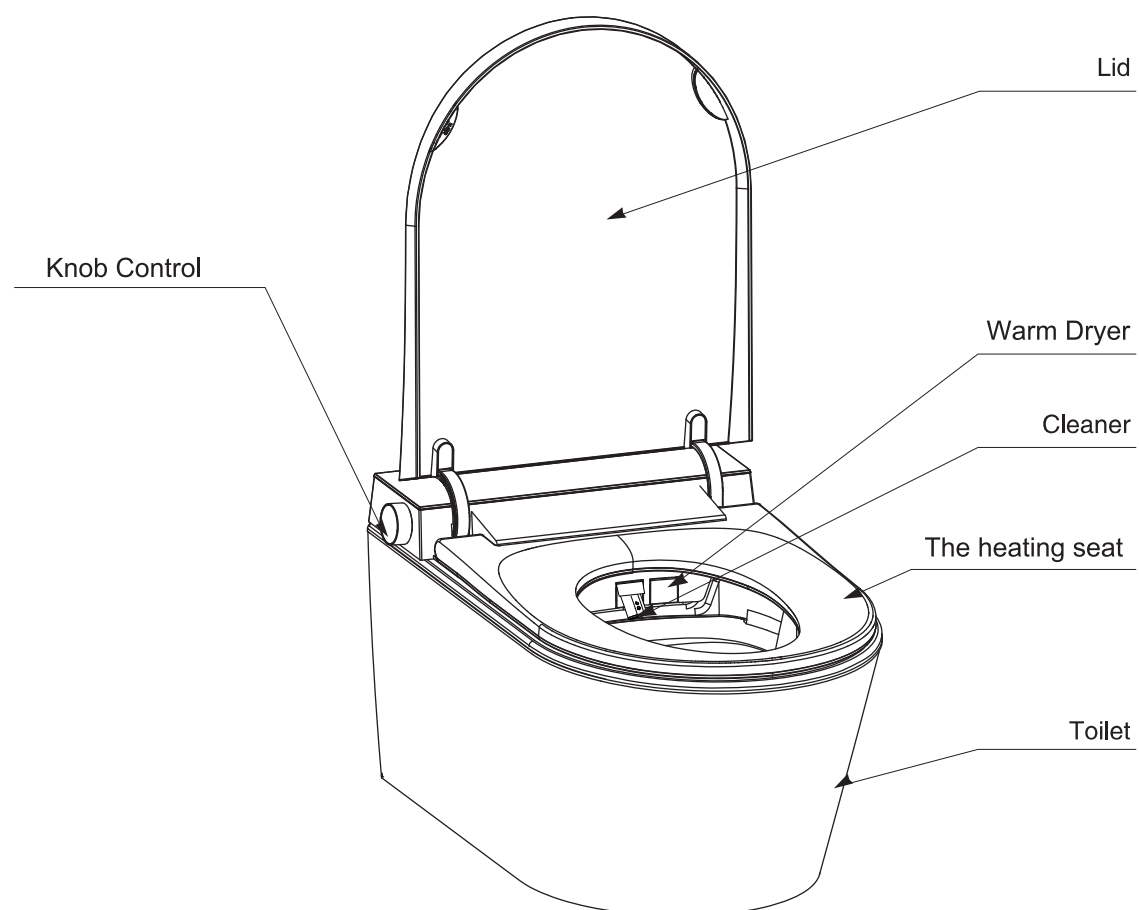

Remote Controller

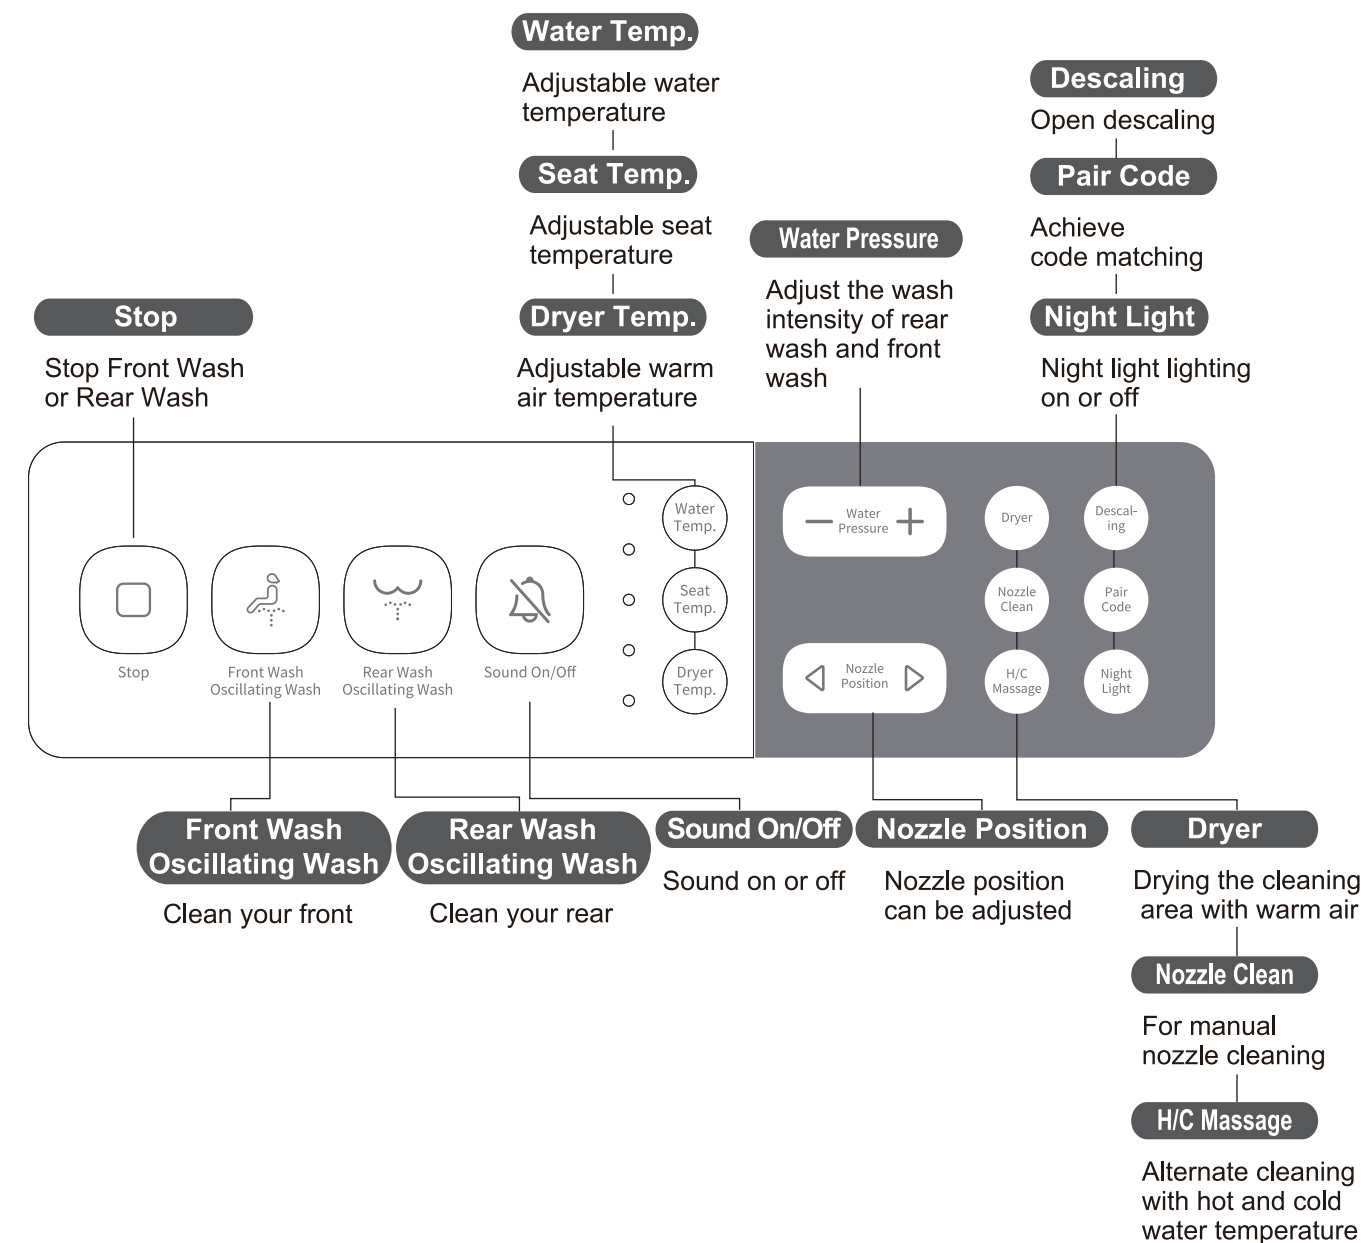

※ Short press "Sound On/Off" button to enter Do Not Disturb Mode 1 (mute mode, sound off, except alert tone). Short press again to activate Do Not Disturb Mode 2 (sound off, knob light off, night light remains on). Short press once more to exit Do Not Disturb Mode.

After Do Not Disturb Mode is activated, it will automatically deactivate after 8 hours.

※ Long press "Descaling" to activate the descaling function.

Warnings and Safety

Please read thoroughly

Firstly, thank you for purchasing our products, for better using our products, please read this instruction carefully and keep it properly.

Please obey all the advise and warning for your safety.

Signs and instructions

Warning: 「Nonobservance or wrong operation will cause very bad accident and danger.」

Notice: 「Nonobservance or wrong operation will cause accident.」

 「Be sure to obey!」

 「Prohibited!」

 「Do not detach by yourself!」

 「Not allowed to be installed in moisture and water place!」

 「Do not touch!」

 「Do not touch with wet hand!」

 「Faraway from fire!」

 「Please follow the instruction!」

 「Pull out the plug!」

 「Earth leakage protection connection!」

WARNING

This product must be reliably grounded.

※Otherwise, it may result in electric shock due to a fault or short circuit.
※Contact an electrical installation company when you are not sure.



Do not throw lighted cigarettes or other burning materials into the product.

※Otherwise, it will easily cause a fire.



Do not touch or plug in the power plug with wet hands.

※Otherwise, there is a risk of electric shock.



Do not use it during a thunderstorm (unplug the power plug in case of thunder and lightning in the vicinity).

※Otherwise, it may cause an accident or fault.



Do not use any poor power socket or any broken power plug.

※Otherwise, there is a risk of electric shock or fire due to poor contact or breakage.



If the seat and cover are damaged, please unplug the power plug, shut off the water supply and contact your local dealer for replacement to avoid danger.

※Otherwise, it is easy to cause the risk of electric shock and fire.



Please use power sockets within the specified range (AC 230V±10%, maximum current 10A or more).

※Otherwise, it is easy to cause a fire or electric shock.



Please unplug the power plug regularly and wipe the dust on the power plug with a dry cloth.

※Otherwise, it will cause a fire in case of poor insulation.



Please do not pull, break, forcibly bend and twist, stretch, curl, bundle, make load-bearing, or over-pinch the power cord at will.

※Otherwise, the broken power cord may cause an electric shock or fire.



People (including children) with physical, perceptual, or intellectual disabilities or lack of experience and common sense should be accompanied by someone when using.

※Otherwise, prolonged use may cause low-temperature burns.



If the power cord is damaged, in order to avoid danger, it must be replaced by specialized personnel from the manufacturer, its maintenance department, or a similar department.

※Otherwise, it is easy to cause an electric shock and fire.



Children should not play with the product.

※Otherwise, it may cause personal injury.



Do not use industrial water or contaminated water supply.

※Otherwise, it may cause cystitis, dermatitis, or electric shock and fire due to mechanical internal corrosion.



It is strictly prohibited to disassemble, repair or modify this product except for our after-sales maintenance personnel or designated specialized maintenance personnel.

※Otherwise, it is easy to cause an electric shock, fire, or abnormal operation, resulting in personal injury.



Do not install this product in a wet or damp bathroom, or locations easily subjected to water splashes.

Please do not splash water on top of the product or clean the product with water directly to prevent water from seeping into the inner parts and causing damage.

※Otherwise, it is easy to cause an electric shock and fire.



Please do not urinate into the dryer opening.

※Otherwise, there is a risk of electric shock.



Please do not insert your hand or other things into the dryer opening. The dryer opening should not be covered when the product is in use.

※Otherwise, it is easy to cause an electric shock, fire, or abnormal operation, resulting in personal injury.




⚠ WARNING

Do not use concentrated nitric acid, concentrated sulfuric acid, glacial acetic acid, ethyl alcohol, petrol and other high corrosive cleanser to clean the plastic body or parts.
※Risk of danger or fire



Do not use industrial water or pollution water.
※Risk of skin disease, corrosion and fire

Do not lean on back forcefully, do not stand on the seat cover, do not open or close the seat or seat cover forcefully.
※Risk of damage or danger

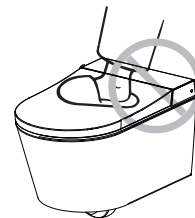


Do not add water or cleanser to smart toilet or remote control, do not wet the smart toilet or power plug with ware or cleanser.
※Risk of fire accident or electric shock

Do not install the toilet in moisture and water floor bathroom.
※Risk of fire accident or electric shock



Do not block the warm wind outlet, do not cover the warm wind outlet when use.
※Risk of electric shock, fire and danger

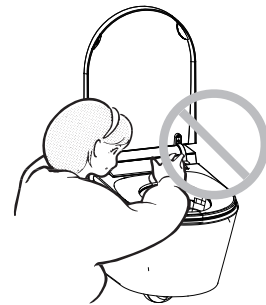

Do not pee to warm wind outlet.
※Risk of electric shock

⚠ WARNING

Please use the battery properly as the following notice:

- Please install the battery according to polarity.
- Please pull out the battery when long time non use.
- Please change the battery when battery no power.
- Please deal with the wasted battery properly to avoid accident.
- Please keep the battery out of the reach of children, to see a doctor immediately when swallowing the battery.
- The battery fluid goes to eye by accident, please clean with water or to see a doctor immediately.
- Please attention the following when using battery.

Please attention the following when using battery.

- Do not keep the battery together with metal (necklace, watch).
- Do not mix use new and old, different brand battery.
- Do not detach or put the battery into water or fire.

※Risk of fire or accident

⚠ ATTENTIONS

Do not use the seat temp or warm wind in high, medium temp too long time.
※Risk of scald.

Keep away of the warm heater, avoid the direct sunlig.

Keep touch the sensor location for clean function working properly.
※alittle difficulty for children to well touch the sensor location.



To avoid the danger caused by the false reset of the thermal circuit breaker, do not supply power through external switching devices, such as timers or connected to circuits that are regularly turned on and off by general components.

Do not pee to clean nozzle.
※Risk of block

Do not bump the ceramic body forcefully.
※Risk of crack

Do not put the napkin, tissue, sanitary napkin to the toilet bowl.

Do not use the cementing material at the bottom of the ceramic body.
※Risk of damage

Do not use all function when temp is blow 0℃.

Please pull out the plug from power socket, close the water supply, flush out the water inside the toilet when long time non use because of a business trip or a vocation.
※Risk of fire accident or water leakage

Please use the new water hose and replace other relevant fittings, do not use the old ones.
※Risk of property damage

In winter season, there will be iced water in the toilet after long time and long distance transportation, please take measures to unfreezes the iced water.
※Risk of fire accident or water leakage

Please pull out the plug and close the water supply from angel valve when power supply suddenly stopped to avoid water leakage.
※Risk of property damage


If the installation mode A:
power disconnect mode: the smart toilet is a single-phase class 1 appliance permanently connected to the fixed wiring, and must be equipped with a single-pole switch or single-pole protection device to disconnect the electric heating element from the power supply, which should be connected to the phase line. When disconnecting the power supply, ensure that the phase line is disconnected.
(Disconnect device connected to fixed wiring is purchased by the user)

Installation







Tools for installation, lists of accessories

Tools for Installation

Please carry the following tools before installing

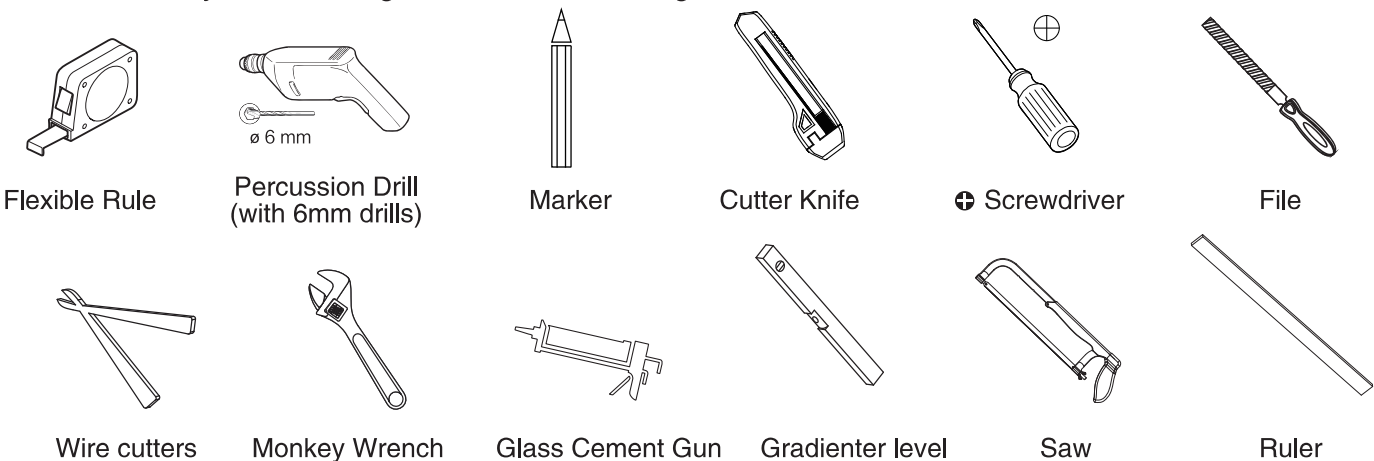

 Lists of Accessories (Please make sure the accessories in the package)

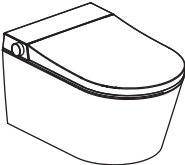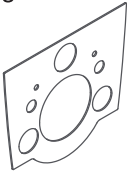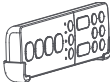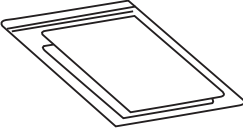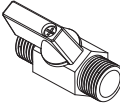A Smart Toilet 	Braided hose 	Cushioning foam 
Power cord connector 	A Remote Control (holder 1 pc, screw 2 pcs) 	Instruction and other specifications 
A ball angle valve 		

※Please make sure the items in the package are complete, if any missing, please contact our customer service center in time.
 ※The pictures of the above items are for reference only, and the actual item shall prevail.

Before you Install

Dimension Drawing


Fittings are required for mounting into the wall




Matching your remote control code

※When the product leaves the factory, the remote control and the product are connected, if the remote control went failure, please re-connect the code as following methods.


1. Unplug the product, press and hold the Pair Code button until the gear light flashes and release.

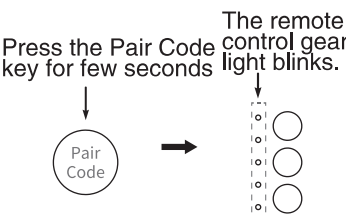

2. Place the remote close to the product and plug it in.

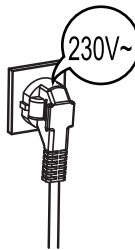


3. Keep on after the gear light stops blinking.

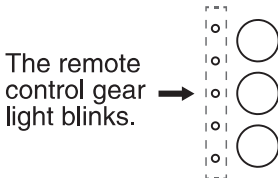

4. The code is successfully paired.

Confirmation of Dimension Drawing


Unit: mm

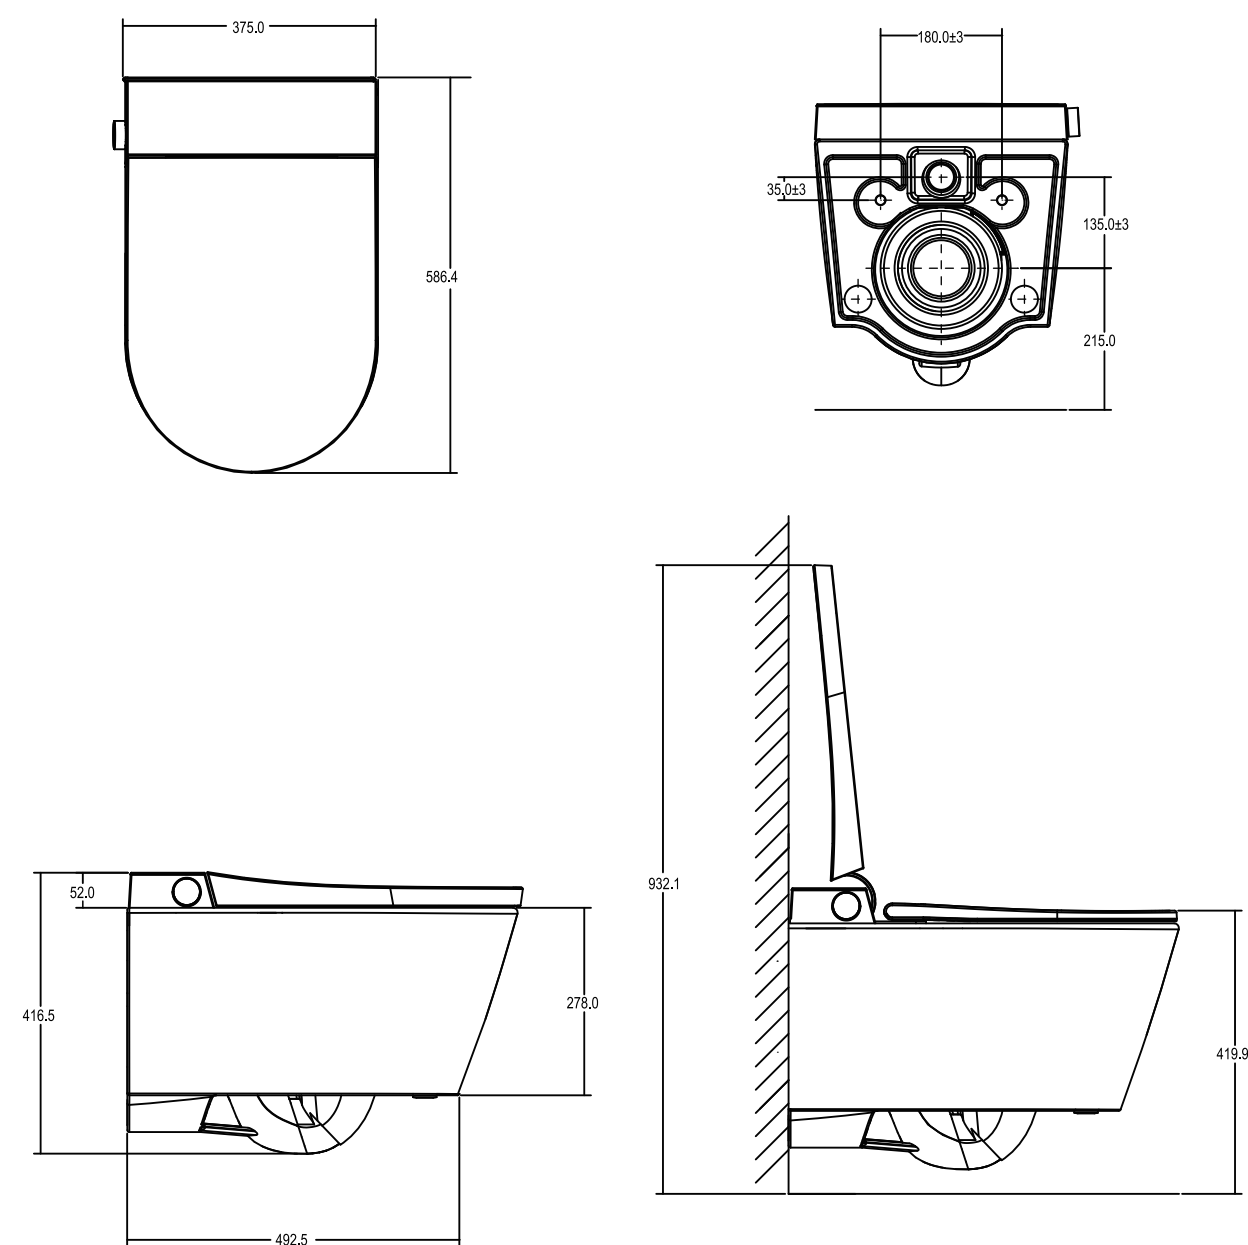

※ The Company reserves the right to change the dimensions indicated in the drawing at any time without prior notice.

Confirmation of installation dimensions


Unit: mm

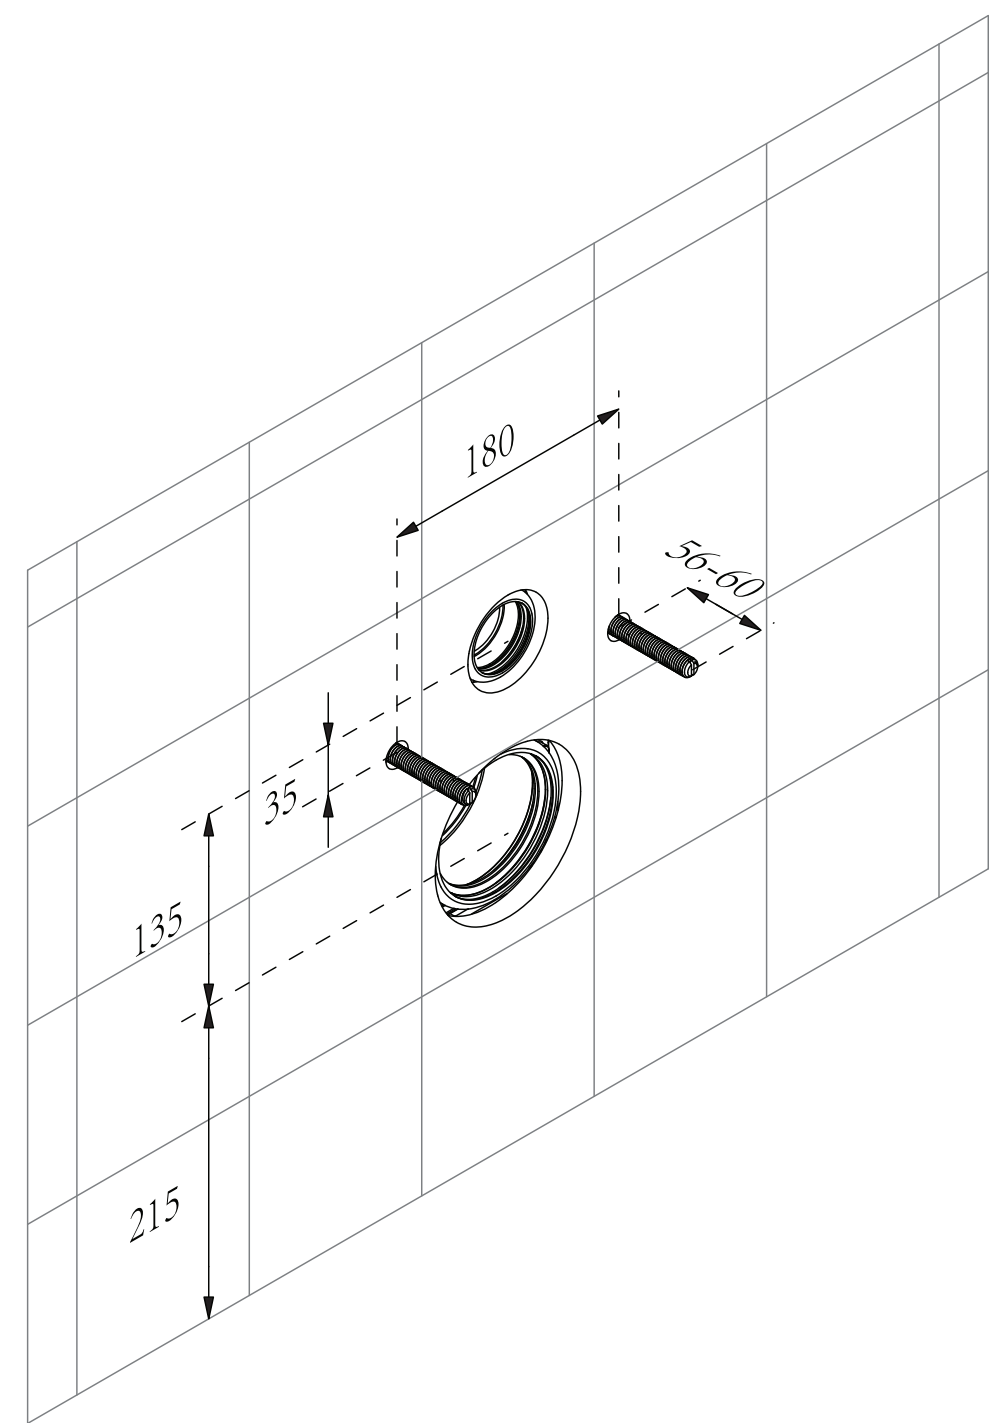

Select installation mode


Installation mode A/ Installation mode B

Installation mode A

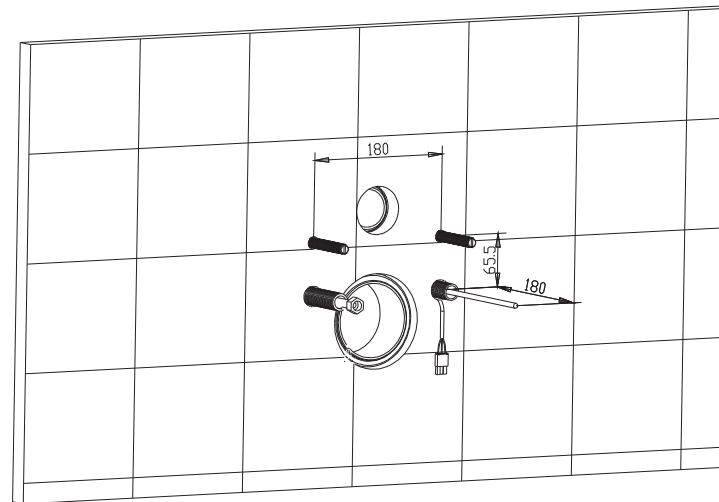


Warm reminder:
This function requires leakage
protection and can be turned
off separately.

Unit: mm

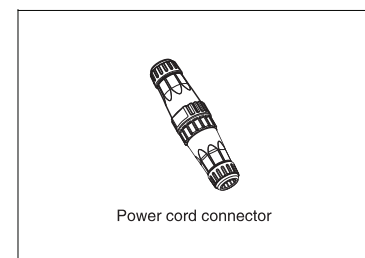


Power cord connector


Optional pack

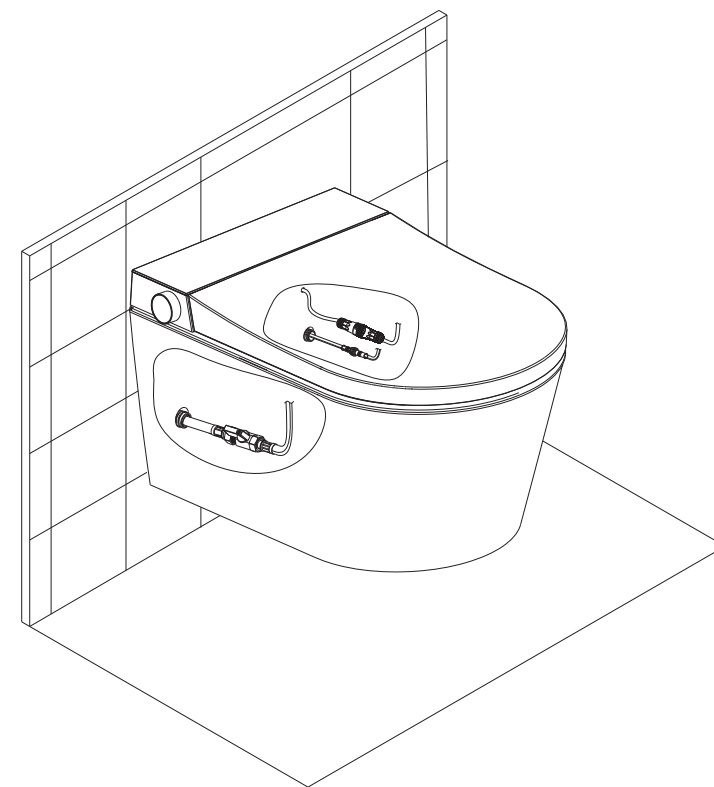

Installation mode B

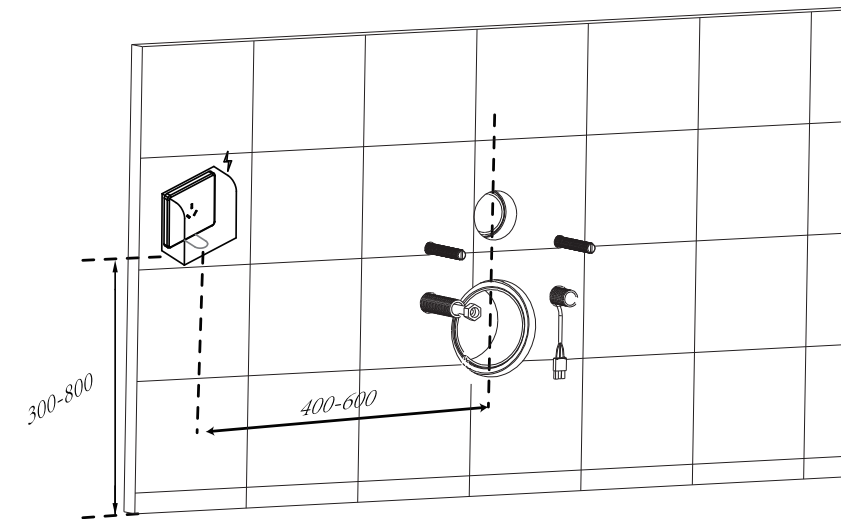

Unit: mm

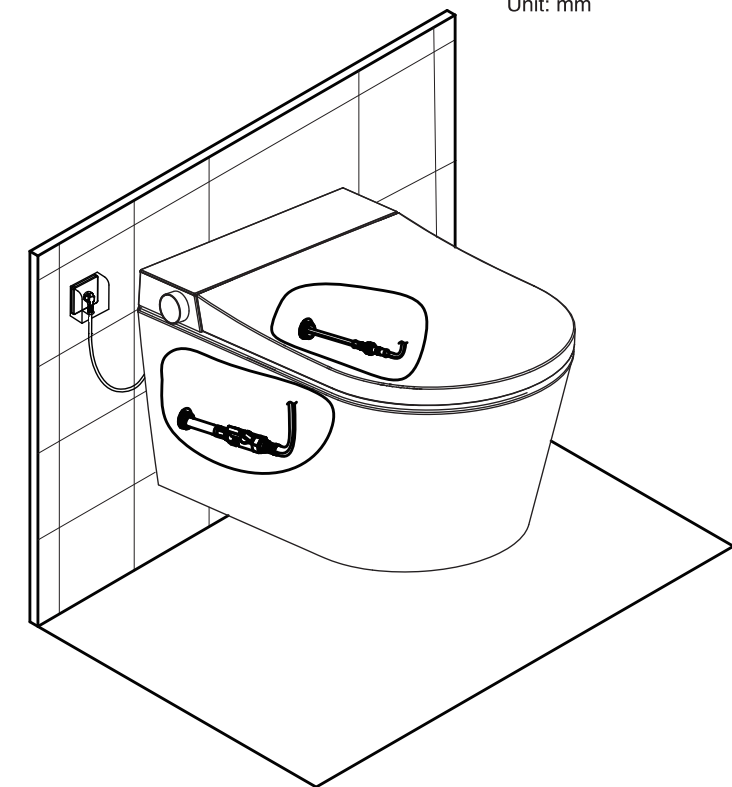


Installing your product

Install your unit using the following steps

1 Installation of Smart Toilet


According to the following figure, place the relevant accessories on one side for use, and then extract the packing box upward.

※ The picture is for reference only. The actual situation shall prevail.

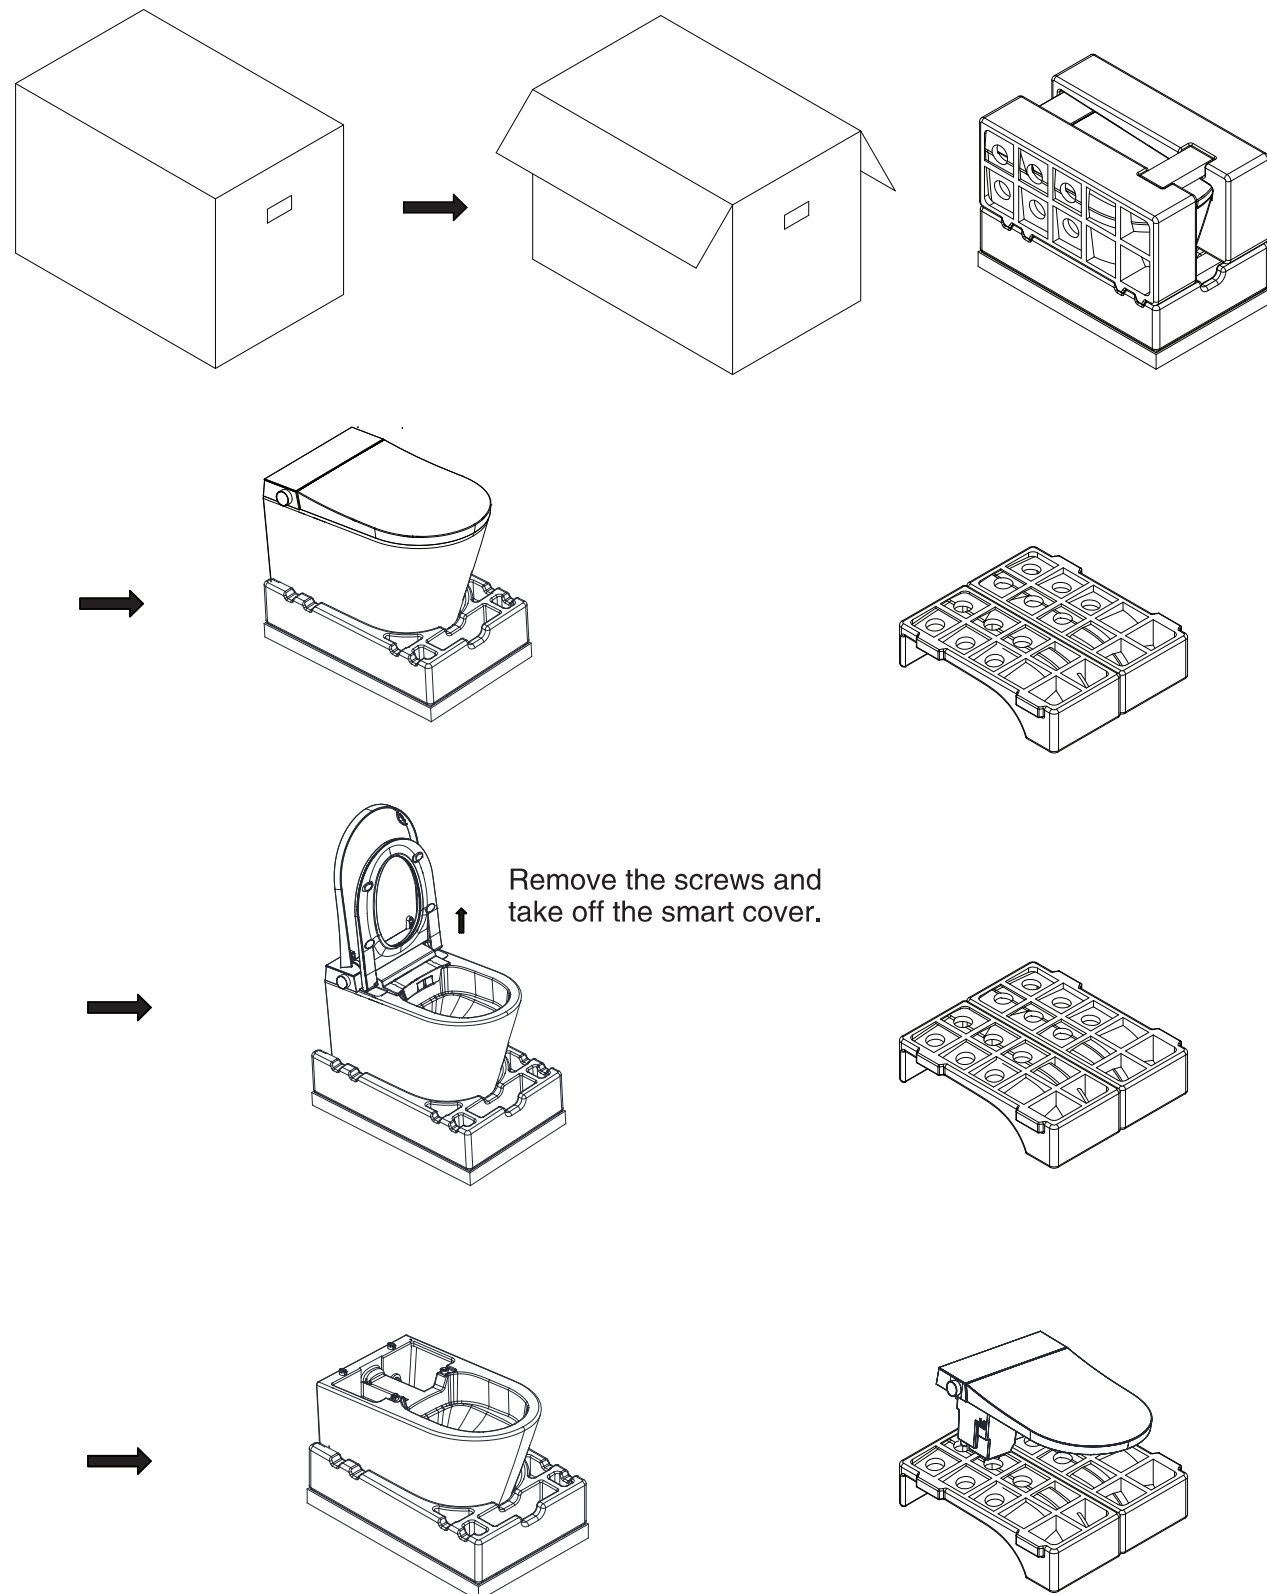


Installation mode A

A1-1

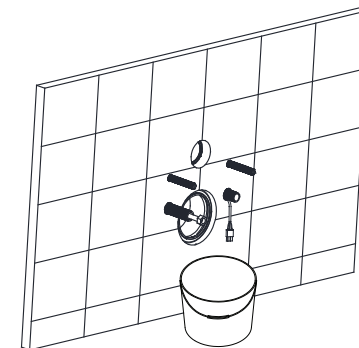


A1-4

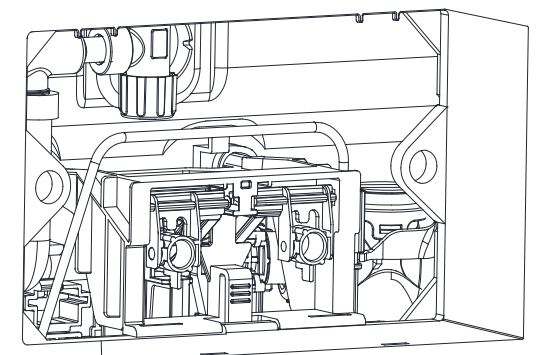


Drain the dirty water and tighten the Angle valve.

A1-2

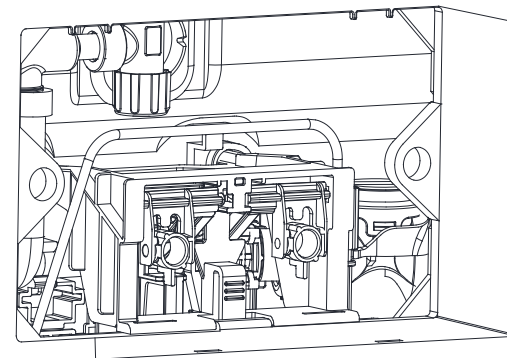


Loosen the Angle valve and release the dirty water.

A2-1

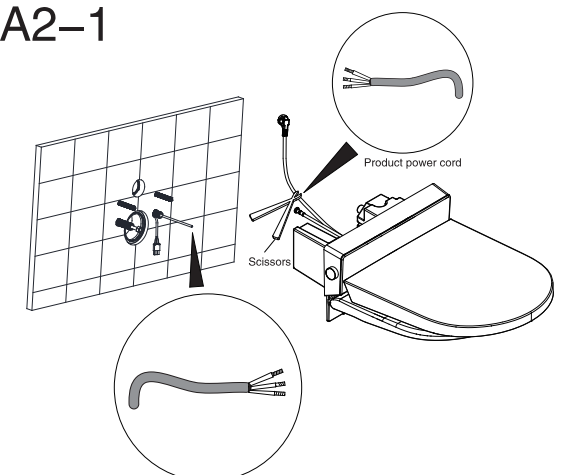


Strip the wire to size.


A1-3

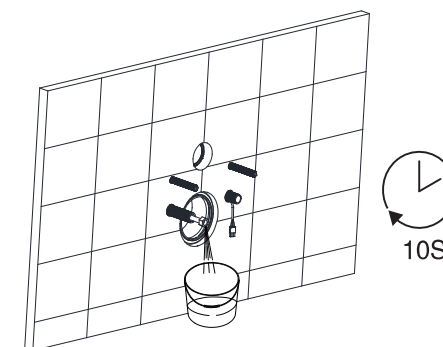


A2-2

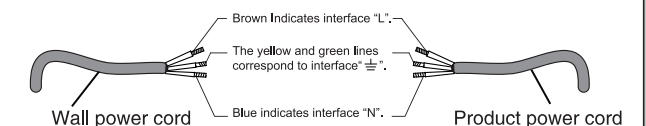


A2-3

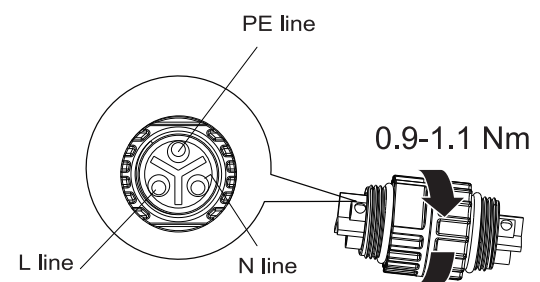

A2-6

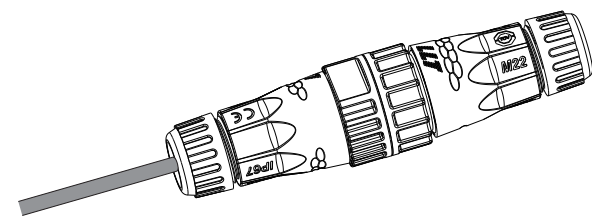


A2-4

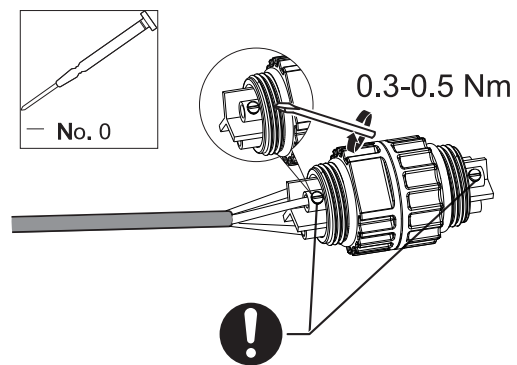


Attention
● Tighten the 6 screws as required,
otherwise electric shock or fire
may occur.

A3-1

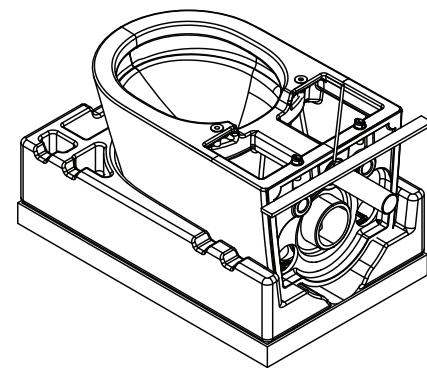


Apply lubricant to the nozzle
(laundry detergent/dish soap, etc.)

A2-5

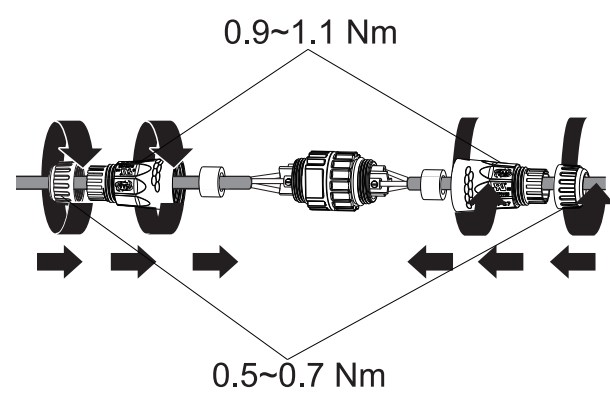


A3-2

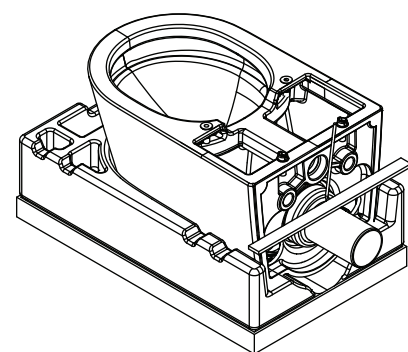


Drainage straightPipe scribing

A3-3

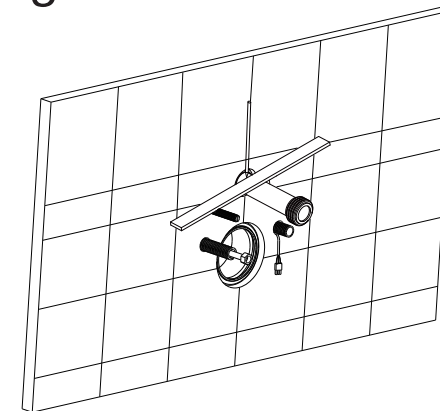


Inlet pipe scribing

A3-6

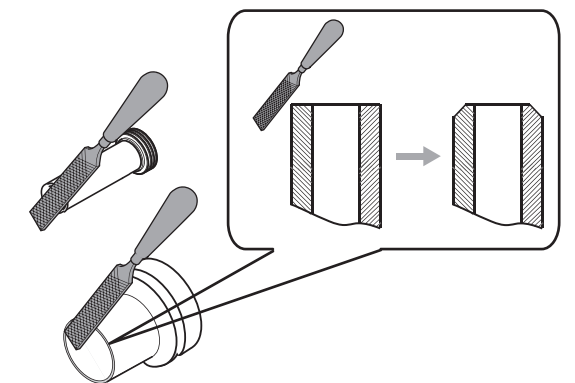


Polish and chamfer the end faces of the two
sawn pipes (as shown).

A3-4

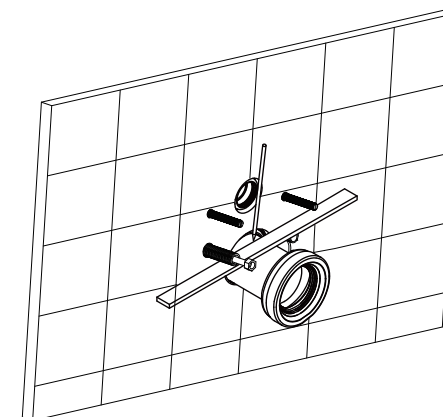


Drainage straightPipe scribing


A3-7

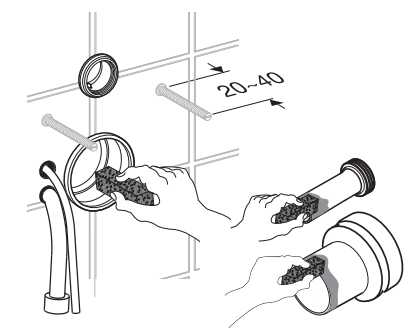


A3-5

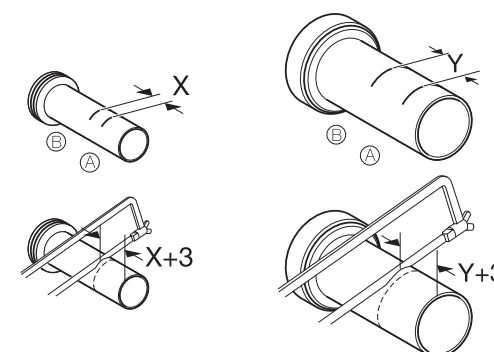


A4-1

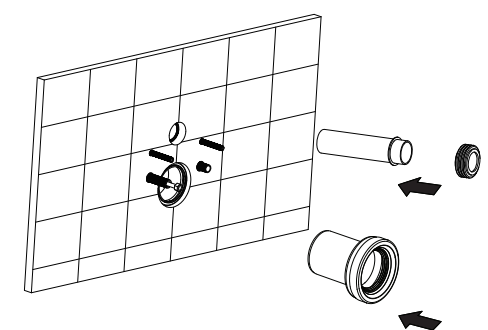


A4-2

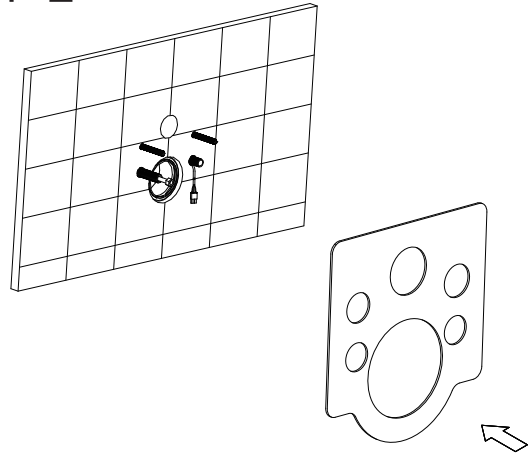


A4-5

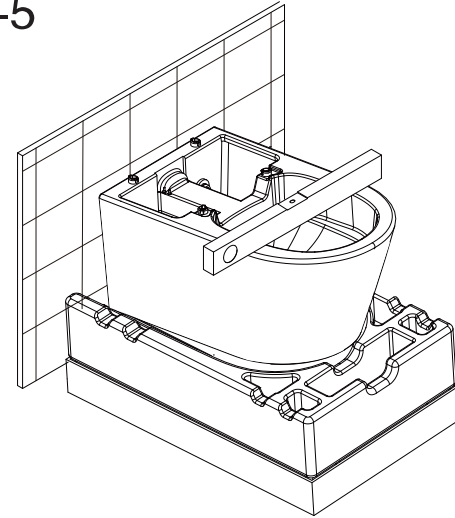


A4-3

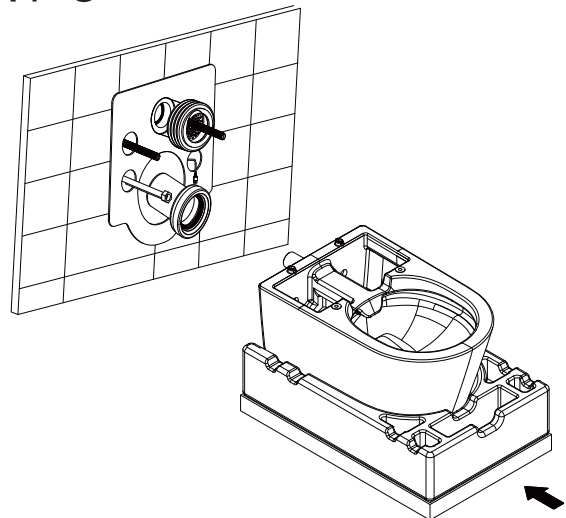

A4-6

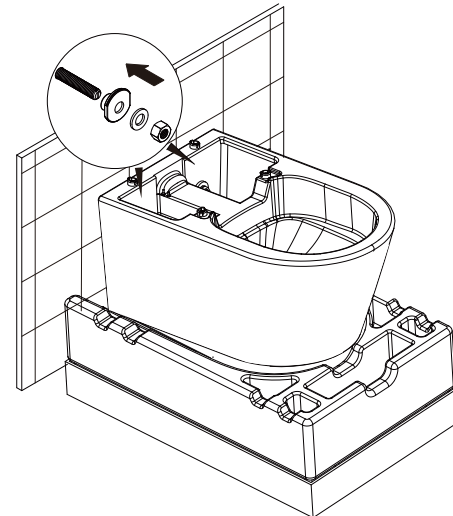


A4-4

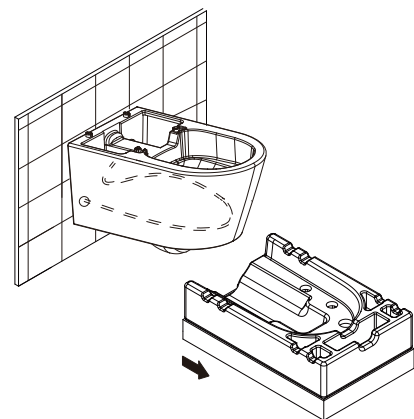


※ When installing the braided pipe, it is necessary to circle the ceramic bottom to avoid breaking the pipe.

A4-7

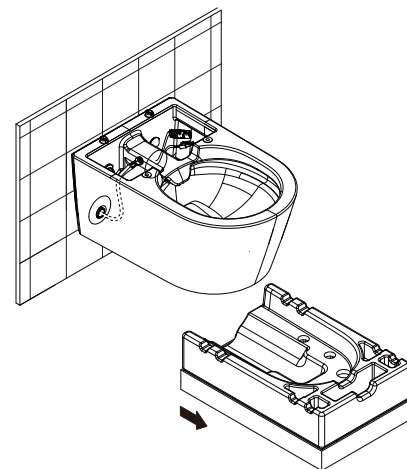


A4-8

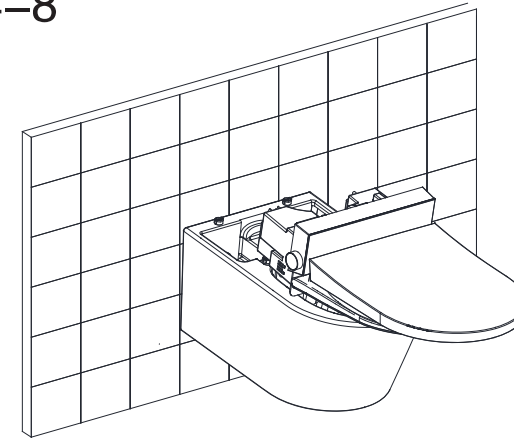


Connect plugs according to concave and convex holes.

A5-2

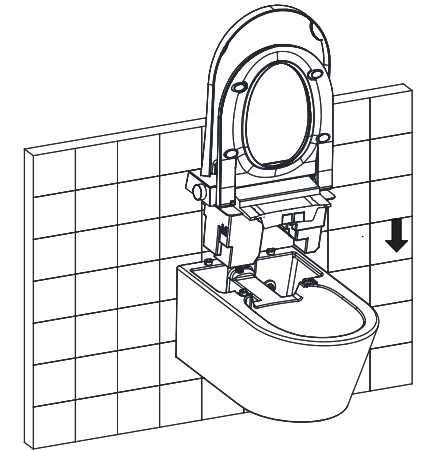


Warm reminder:
The braided tube is pushed into the wall to make the smart cover fit naturally with the ceramic after installation.

A5-1

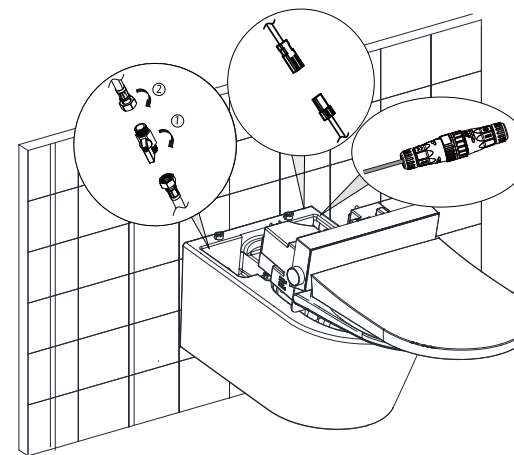


A5-3

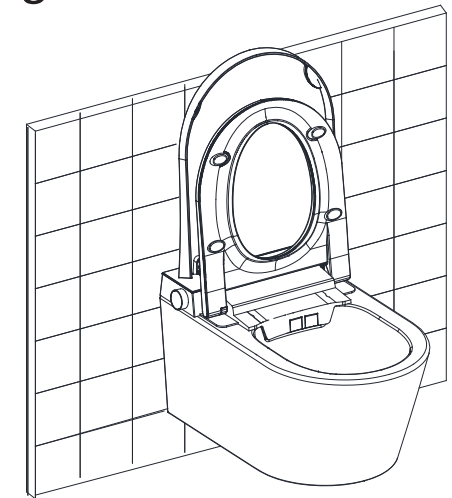


Installation mode B

B1-1

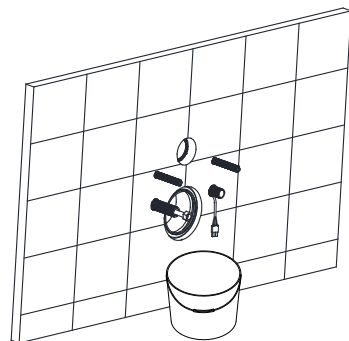


B1-4

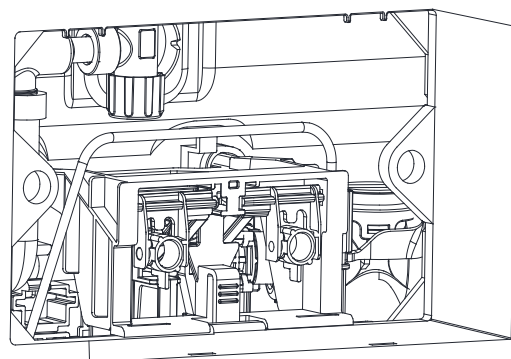


Drain the dirty water and tighten the Angle valve

B1-2

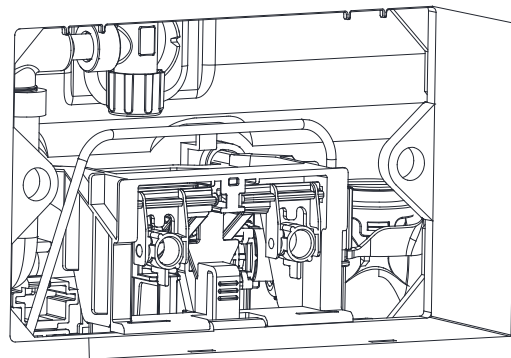


Loosen the Angle valve and release the dirty water

B1-3

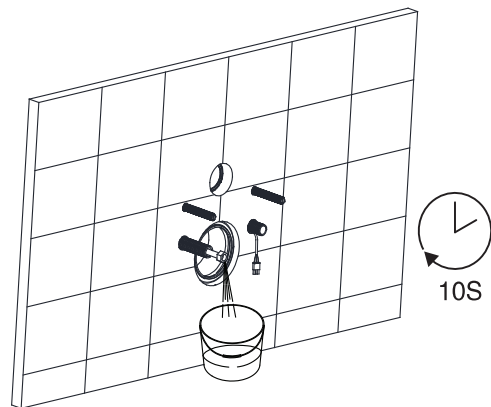


B2-1

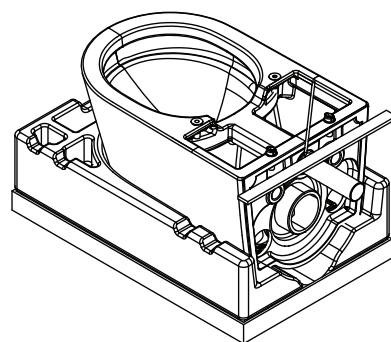


Apply lubricant to the nozzle (laundry detergent/dish soap, etc.)

B2-2

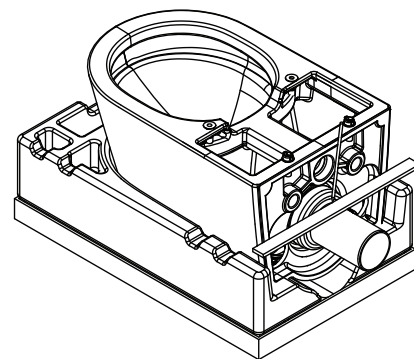


Line the straight drainage pipe

B2-3

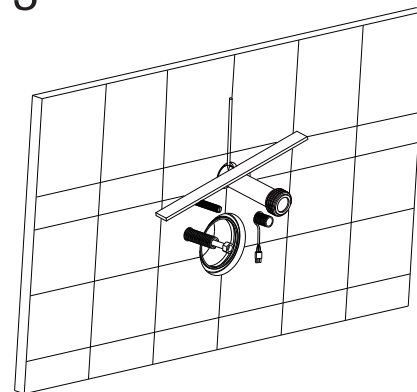


Inlet pipe marking

B2-4

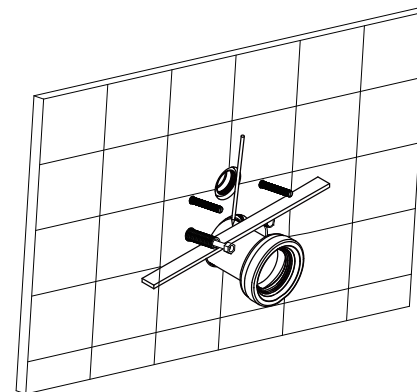


Line the straight drainage pipe

B2-5

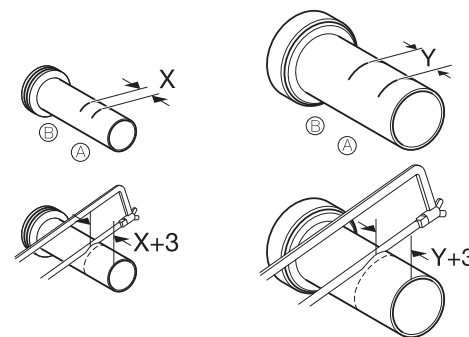


B2-6

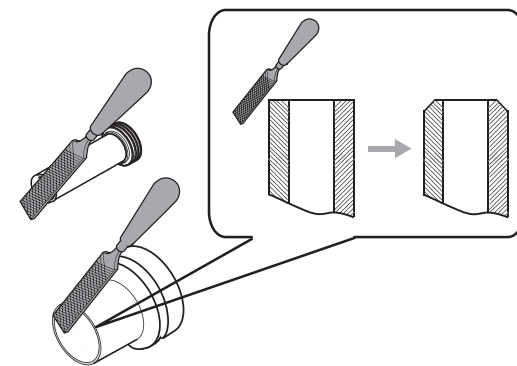


Polished and chamfered end faces of both saw tubes (as shown).


B2-7

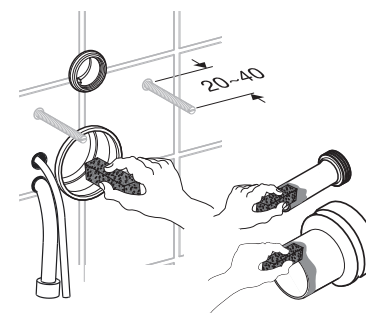


B3-1

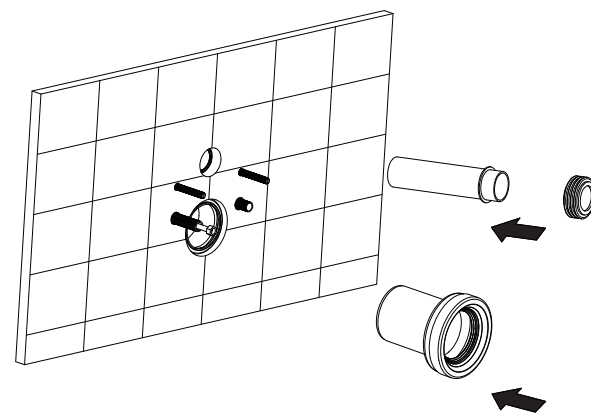


B3-2

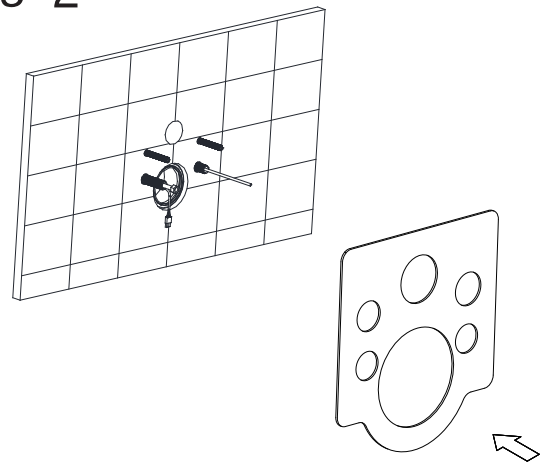


B3-5

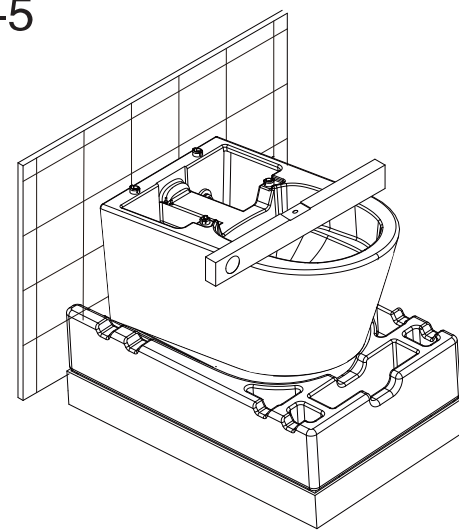


B3-3

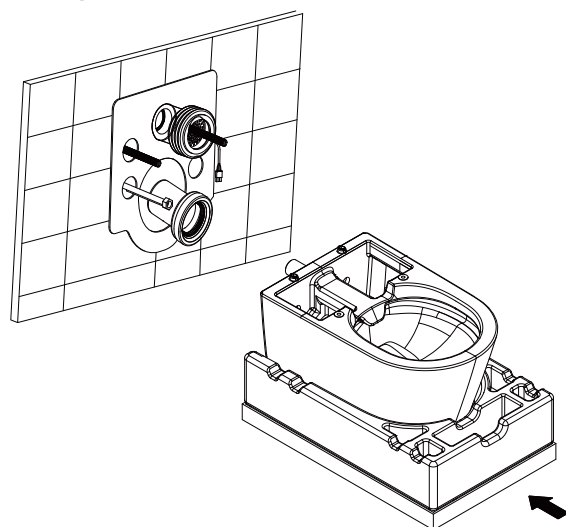

B3-6

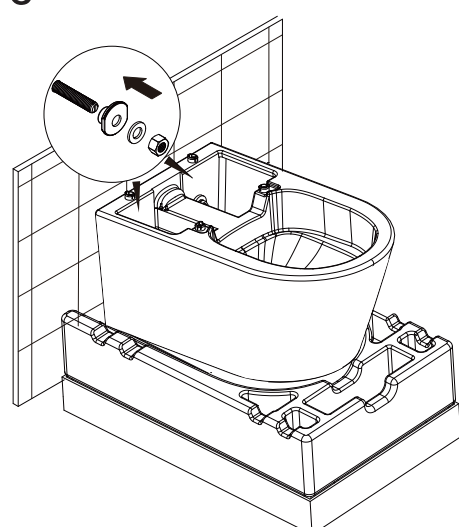


B3-4

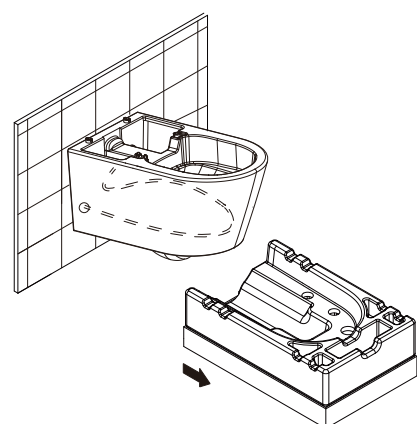


※ When installing the braided pipe, it is necessary to circle the ceramic bottom to avoid breaking the pipe.

B3-7

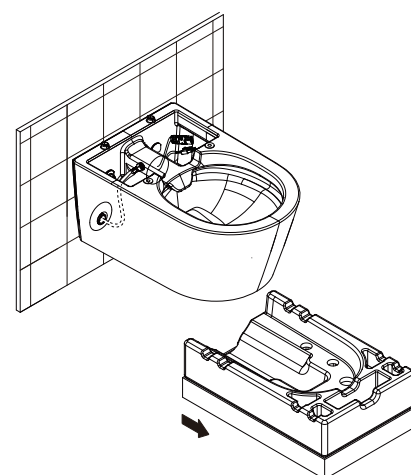


B3-8

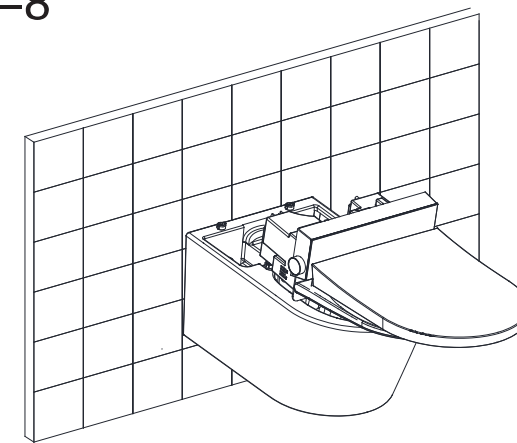


Connect plugs according to concave and convex holes.

B4-2

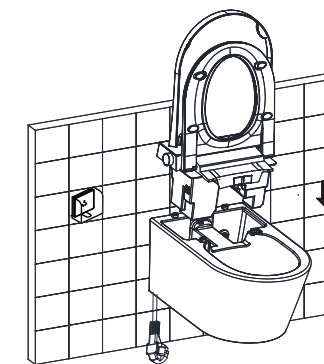


Warm reminder:
The braided tube is pushed into the wall to make the smart cover fit naturally with the ceramic after installation.

B4-1

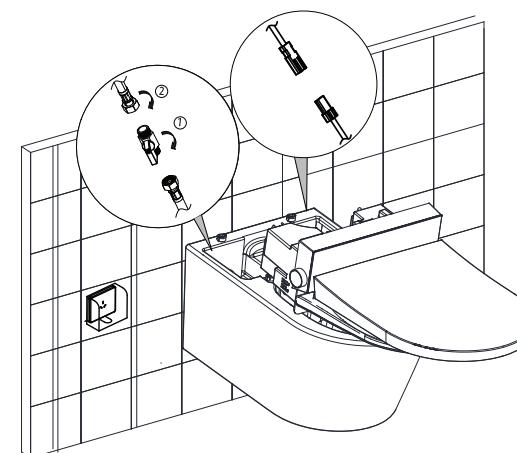

B4-3

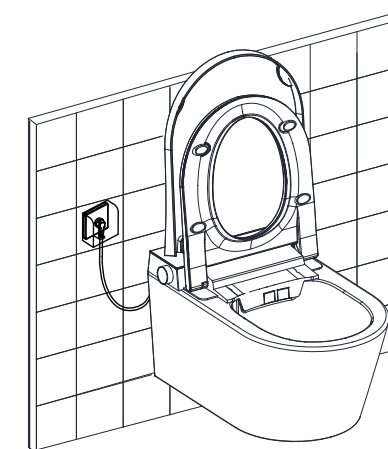


2 Installing the remote


1. Drill two 6mm(0.24 inch) diameter holes on the wall (about 1.77 in deep)
2. Knock the anchors into the hole with a hammer.
3. Secure the holder with anchors.
4. Use the screws to secure the holder to the wall.
5. Remove the battery cover from the backside of the remote to install batteries
6. Once finished, remote is ready to be placed in its holder.

Detailed steps shown in the diagram below:

- ※ Please use proper mounting tools for special wall surfaces (such as wood, HDF, etc.)
- ※ The remote control holder should be installed away from the bidet's spray trajectory.
- ※ The remote control holder should be installed within reach when seated on unit.
- ※ Make sure there is nothing to block the transmission between the toilet and its remote.

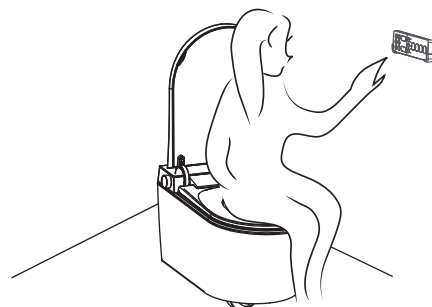

Steps:

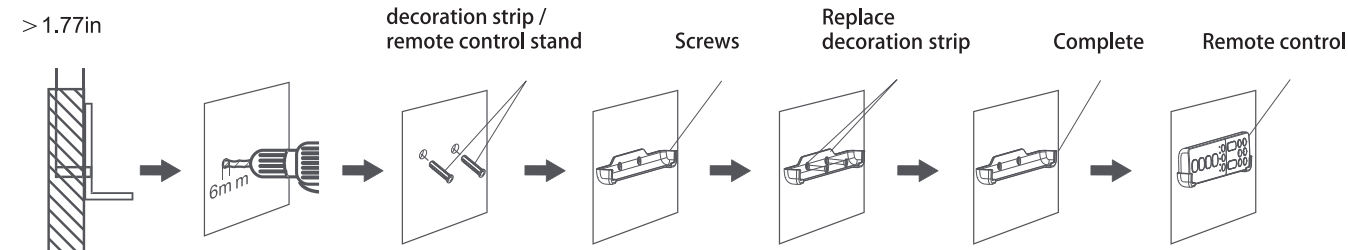

3 Add the detergent

1. Push to the right and remove the decorative cover plate, and take out the silicone plug of the filling port.
 2. Open the descaling liquid bottle cap, align the filling port, and pour the descaling liquid.
 3. Put the silicone plug back into the filling port, then align the decorative cover plate with the groove, and push it left to place it in place.
 4. Away from the seat state, Short press the "Descaling" button, start the automatic cleaning tank function.
- After entering the descaling function, Short press the "Descaling" button again to directly enter the second stage of the automatic water tank cleaning. Pressing will not allow you to enter again until the descaling mode automatically exits.


Step 1 Automatic descaling:

- ※ Cleaning, drying, nozzle cleaning and other functions cannot be turned on during the descaling process, and other functions are normal.
- ※ The descaling function can only be opened when the tank is full of water;
- ※ Power off during descaling, power off memory, power on to restart descaling.

Step 2 Automatically clean the water tank:


- ※ Automatic cleaning water tank midway stop water or low flow, then automatically stop cleaning water tank function; Restart the operation when the water tank is filled.
- ※ Automatic cleaning water tank is powered off in the middle, there is power memory, power on to restart the automatic cleaning water tank.

- ※ Please use special detergent, otherwise it may cause blockage and damage to internal components.
- ※ When adding detergent or maintenance, be careful not to introduce sediment and other particles.
- ※ When adding the detergent, please disconnect the power supply first, and then switch on the power supply after adding the detergent.
- ※ When adding the descaling solution, if you use solid descaling particles, you need to wait until the descaling particles are completely dissolved before pouring into the machine.
- ※ During the descaling process, the power supply must not be cut off within 40 minutes, and no other actions can be taken during the process.

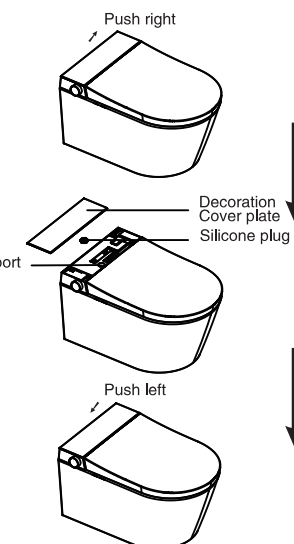

Testing the product


- Check if each functions of the products is normal or not?
Check the rear washing and front washing (including the adjustment of cleaning strength and spout position), warm wind/wind temp, the adjustment of water temp and seat temp, spout cleaning is operate normally or not?
- Please use your hand to hold the seat sensor area, turn the knob forward or press the " " button on the remote controller, and use your hand to cover the front of the nozzle to block the flow of wash water to avoid spraying water on your body or clothing.

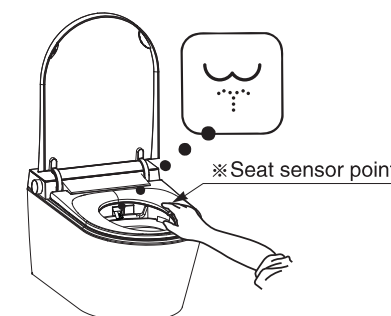

《Function Explanations》

■ Power / Stop

Stand by: Press it for 3s to activate it.
Activated and sitting on the seat: Under the rear washing, front washing, press it for short time to stop it; press it for 3s to enter to the drying mode.
In the drying mode: press it for short time to stop it.
Activated and not sitting on the seat: Press it for 3s to enter to the standby mode.

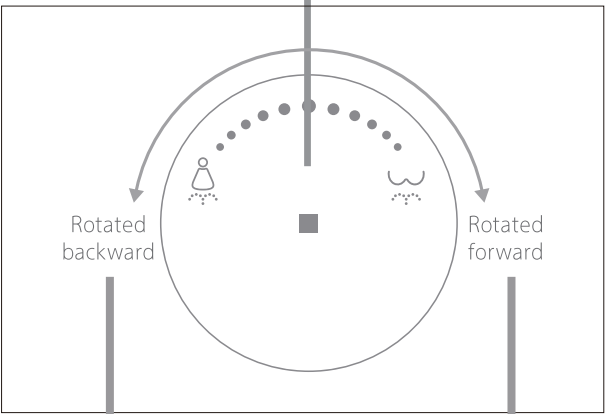

■ Front wash

Under no cleaning and drying mode, and seating the toilet.

“Rotated backward” , rotated it backward for 45° to enter into the front wash mode, which the mode is defaulted to cleaning moving. The cycle of operation: front wash 1.5mins + drying 4mins. When the function of front wash is activated, rotates the switch forward to increase the cleaning strength, switch backward to decrease the cleaning strength.

■ Rear wash

Under no cleaning and drying mode, and seating the toilet.

“Rotated forward” , rotated it forward for 45° to enter into the rear wash mode, which the mode is defaulted to cleaning moving. The cycle of operation: rear wash 1.5mins + drying 4mins. When the function of rear wash is activated, rotates the switch forward to increase the cleaning strength, switch backward to decrease the cleaning strength.

■ User-friendly Design

- Damper
The product has installed the damper which provide the toilet cover and toilet seat with a buffer function, to achieve the mute effect.
- Memory mode
No power off state, power on and standby switch, keep the latest water temperature, water pressure, air temperature, seat temperature, pipe position setting state.
- Antibacterial Seat
Antibacterial material is used for the seat.
- Nozzle self-cleaning
Start the nozzle self-cleaning action every time the cleaning tube is extended/returned.
- Descaling mode
Away from the seat state, Short press the "Descaling" button, start the automatic cleaning tank function, After entering the descaling function, Short press the "Descaling" button again to directly enter the second stage of the automatic water tank cleaning. Pressing will not allow you to enter again until the descaling mode automatically exits.
Step 1 Automatic descaling:
※ Cleaning, drying, nozzle cleaning and other functions cannot be turned on during the descaling process, and other functions are normal.
※ The descaling function can only be opened when the tank is full of water;
※ Power off during descaling, there is power off memory, power on to restart descaling.
Step 2 Automatically clean the water tank:
※ Automatic cleaning water tank midway stop water or low flow, then automatically stop cleaning water tank function; Restart the operation when the water tank is filled.
※ Automatic cleaning water tank is powered off in the middle, there is power memory, power on to restart the automatic cleaning water tank.
※ During the descaling process, the power supply must not be cut off within 40 minutes, and no other actions can be taken during the process.
- Multiple protections
Multiple different built-in safety features to protect the user and product.
- 72-hour automatic drainage
After 72 hours of no operation, the water in the cleaning tank will be automatically emptied and another tank of water will be added.

Maintenance

Regular maintenance is required to ensure normal use

Cautions

Please cut off the power and water supply before maintaining the product.
Do not wash the product by water during maintenance.

Freeze proofing in water (the weather temperature is below to 4℃)


1. Long time no use the product when you are on the business trip or vacation.
①Close the angle valve of water supply first.Drain the product water.
②After draining away water about 30s, please pull up the attaching plug.
2. The hydrops from the product may be frozen after the long-distance transportation or long-term storage. To prevent the damage that caused by freezing, please take anti-freezing measures.

Notices

- The product places for 30mins in a warm indoor until it naturally melted, then charges it and opens the angle valve of water supply.
- If the water freezes, and there is no water to flush the toilet, you can melt the water supply hoses of toilet or the connector of water supply hoses by hot towel. (Please do not melt the water supply hoses of toilet by hot water or hot wind.)


Common Problems

Phenomenon	Fault Diagnoses	Solutions
No water	Check whether there is water in the water pipe or not	Turn on the water supply
	Check whether the angle valve of water supply open or not	Open the angle valve of water supply
Leaking from the connector	Check whether the connector is span tightly or not	Tighten it up again
	The sealing elements in the connectors are aged or broke	Change the sealing elements
Small amount of the water flow	Check whether the angle valve of water supply is not open completely or not	Open the angle valve of water supply completely
Leaking from the devices	Check whether the sealing elements is blocked or not	Change the sealing elements

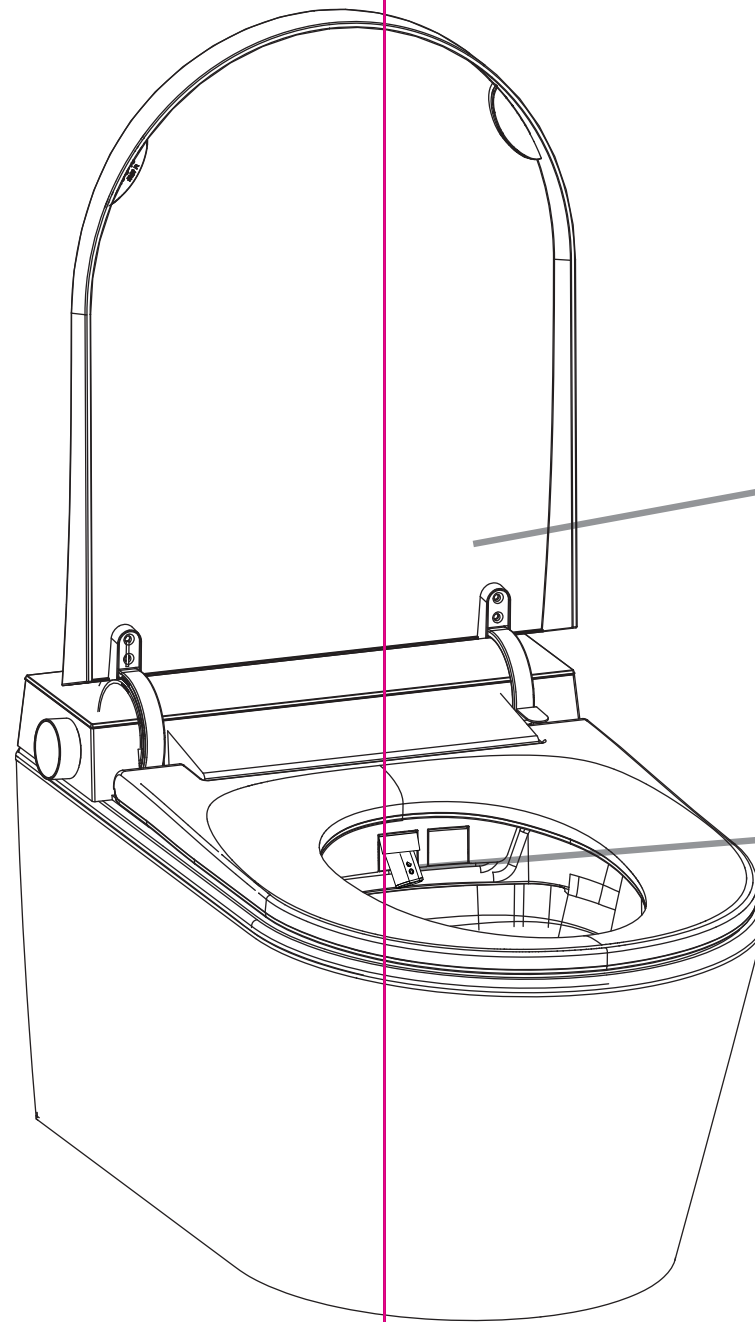


! Caution

Please do not spray water or detergent on the smart toilet or remote control. 
Please do not get wet in the product or the attaching plug by water or detergent.
※Otherwise, it may be caused the electric shock and the fire accident.

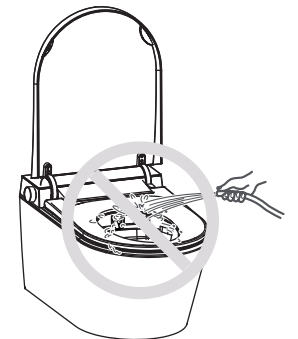


Cleaning and Maintenance Methods of Plastic Components,Ceramics and Metal

- If there is dirt or dust on the product, please clean the product with the soft wet towel.
- You can clean the ceramics parts with the soft brush, soft towel or sponge, and should clean with the neutral detergent that add with cold water or warm water.
- ※ Please do not use the unsuitable detergent to clean the product. (Such as, concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, toluene, phenol, cresol, N-dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, concentrated hydrochloric acid, 95% alcohol, gasoline, kerosene, brake oil, etc.)

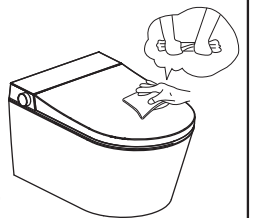

Cleaning and Maintenance of Spout

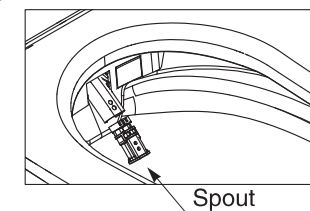

- Press "Nozzle Clean" button , the cleaner will stick out automatically when you leave the seat. If there is any dirt on the spout hole, please hold it and clean it with toothbrush.
- ※ Please do not clean it too hard, because it may damage to the spout.
- Please change the spout if it blocked.

Troubleshooting

《 If something is damage 》

If you found out similar failures, please read the following contents, and adopt the solutions to solve the problems. If you still cannot solve the problem, please contact with our customer service center.

Power button

Phenomenon	Fault Diagnoses	Solutions
Not working	Check whether the attaching plug is loose or not	Please check the circuit

Wash functions

Phenomenon	Fault Diagnoses	Solutions
No water from the spout	Check whether or not the water supply cuts off	Wait for the water supply restoring
	Check whether or not the inlet pipe is flexed	The inlet pipe must be straight
The intensity of cleaning is not strong enough	Check whether or not the water pressure of cleaning switch to low level or not	Regulate the water pressure according to the instruction manual
Unusual water flow from the spout	Abnormal operation	Unplug the attaching plug for one minute and then plug it again
The water temp is not warm enough	Check whether or not the water supply switches to low level	Regulate the water temp according to the instruction manual
The cleanser is always leaking	Solenoid valve no longer has any effect	Please contact with our qualified maintenance personnel for repairing
The cleaning function is not working normally	The human induction system of the toilet seat no longer has any effect	Please contact with our qualified maintenance personnel for repairing

Dryer

Phenomenon	Fault Diagnoses	Solutions
The dryer blows cold air	Check whether or not the dryer switches off	Regulate the temperature of dryer according to the instruction manual
	Check whether or not the heating element of dryer is damaged	Please contact with our qualified maintenance personnel for repairing

Heated Seat

Phenomenon	Fault Diagnoses	Solutions
The seat temp is too low or is not hot	Check whether or nor the temp of toilet seat is on the “off” position	Regulate the temperature of toilet seat according to the instruction manual

Remote Control

Phenomenon	Fault Diagnoses	Solutions
Remote control is not working	Check whether or not there is any water on the remote control	Wipe off water by dry towel

Others

Phenomenon	Fault Diagnoses	Solutions
The toilet seat/toilet cover opens or closes too fast	Damping has no effect.	Please contact with our qualified maintenance personnel for repairing

Specifications

Rated voltage		230V~
Frequency		50Hz
Rated power input		1050W(When inlet water temp in 15℃)
Seat and dryer temperature range		6 diffdrent levels
Dryer temperature range		35℃–55℃
Water supply hose type		DN15(G1/2")
Water Inlet	Minimum pressure	11.6psi, and also make sure the water flow is above 0.61GPF/10s
	Maximum pressure	108psi (static state)
Toilet	Hole distance	180mm
Flushing	Heating type	Instant heating
	Washing temp range	OFF/33℃–39℃
	Safety system	Butterfly thermostat, thermal fuse, flow sensor
Dryer	Dryer temp range	OFF/ 35℃–55℃
	Dryer air speed	> 4m/s
	Safety system	Thermal fuse, bi–metal
Heated seat	Heat temp range	OFF/ 33℃–39℃
	Safety system	Thermal fuse

※ Explanation of rated power: When the ambient temperature of the product is 23 ° C ±2 ° C, the inlet static pressure is 0.2±0.02MPa, and the inlet temperature is 15 ° C ±0.5 ° C, the product starts to power on and start. After the cleaning intensity, seat temperature, and water temperature are set to the highest level, the cleaning is started and the mobile cleaning function is turned on, and the average power of a cleaning cycle is continuously stable.